





Quick-Clear Valve

Use of protective eyewear is recommended.

INSTRUCTIONS FOR USE

Recommended for use at first tank change, and every second tank change thereafter. Valve should be used for maintenance or for troubleshooting. Also recommended for use before seasonal storage to avoid build up of contaminants during off-season. The Quick-Clear valve is used to clear out propane contaminants in the fuel line, which may block the flow of propane from the tank to your Mosquito Magnet®. The Quick-Clear valve is a gold, threaded knob located on the bottom or back of your trap. It should be used with the Quick-Clear adapter included in the box with your Mosquito Magnet®, and a Mosquito Magnet® Quick-Clear cartridge available on our website at ww.mosquitomagnet.com, or at your local Mosquito Magnet® retailer. Use of protective eyewear is recommended during Quick-Clear valve operation.

Important: Extinguish all smoking materials prior to use of Quick-Clear Valve.
Do not stand directly behind the Quick-Clear cartridge during operation.

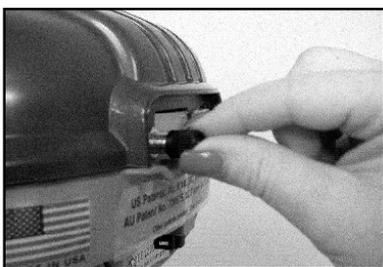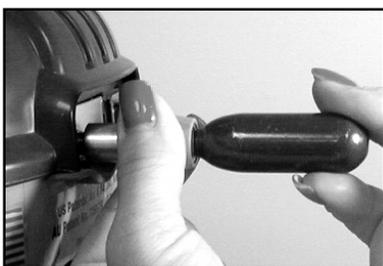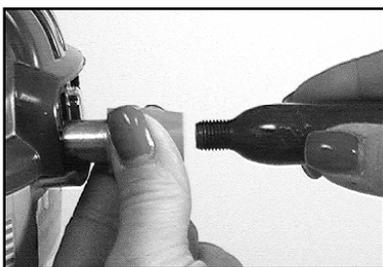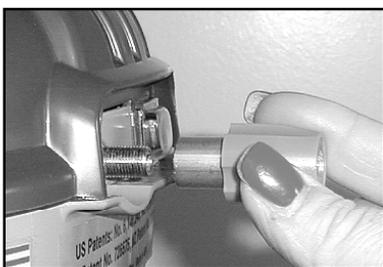

1. Shut down your Mosquito Magnet®. Let fan run until it stops.
(about 35 mins.)
2. Close the propane tank valve by turning to the "Off" position.
(turn the tank valve clockwise)
3. Remove the protective cap from Quick-Clear valve on your trap.
4. Hand-screw the Quick-Clear adapter on to Quick-Clear valve, until finger tight.
5. Hand-screw the Quick-Clear cartridge into the Quick-Clear adaptor clockwise until hand tight. **IMPORTANT** – do not over-tighten while holding the adapter in place.
6. While holding the adapter in place **Slowly** unscrew Quick-Clear cartridge up to **1/4 turn only** in counter clockwise direction from the Quick-Clear adapter only. The strong flow of compressed air will last up to 3 minutes. Be sure to allow Quick-Clear cartridge to run out completely.
(hissing will stop when cartridge is empty. Note: Quick-Clear cartridge will be cold to the touch)
7. Unscrew the Quick-Clear cartridge to remove. Discard empty Quick-Clear cartridge after use, it is not reusable or re-fillable.
8. Unscrew Quick-Clear adapter to remove. (Use caution when removing Quick-Clear adapter and cartridge, as some residual compressed air may come out at this time. Remember to **KEEP** the Quick Clear adapter for future use!)
9. Replace Quick-Clear valve protective cap, and proceed with normal start up of your Mosquito Magnet. If use of Quick-Clear valve feature does not resolve starting trouble, contact Technical Support **1-877-699-8727**